

YANMAR

M2215-04E150

YANMAR[®]

SERVICE MANUAL

MARINE DIESEL ENGINE

6LY3-ETP/-STP/-UTP

YANMAR CO.,LTD.

		Publication No.		M2215-04E150	
History of Revision					
Manual Name		Service Manual for Marine Diesel Engine			
Engine Model:		6LY3-ETP/-STP/-UTP			
Number of revision	Date of revision	Reason for correction	Outline of correction	Correction item No (page)	Corrected by
New edition: November 2005					

Printed in Japan
M2215-04E150

FOREWORD

This service manual has been compiled for engineers engaged in sales, service, inspection and maintenance. Accordingly, descriptions of the construction and functions of the engine are emphasized in this manual, while items, which should already be common knowledge, are omitted.

One characteristic of a marine diesel engine is that its performance in a vessel is governed by the applicability of the vessel's hull construction and its steering system.

Engine installation, fitting out and propeller selection have a substantial effect on the performance of the engine and the vessel. Moreover, when the engine runs unevenly or when trouble occurs, it is essential to check a wide range of operating conditions - such as installation to the full and suitability of the ship's piping and propeller - and not just the engine itself. To get maximum performance from this engine, you should completely understand its functions, construction and capabilities, as well as proper use and servicing.

Use this manual as a handy reference in daily inspection and maintenance, and as a text for engineering guidance.

©2005 YANMAR CO., LTD

All rights reserved. This manual may not be reproduced or copied, in whole or in part, without the written permission of YANMAR CO., LTD.

CONTENTS

1. General	1
1.1 Exterior views	1
1.2 Main specifications	2
1.3 Fuel oil, lubricating oil and cooling water	3
1.3.1 Fuel oil.....	3
1.3.2 Lubricating oil	5
1.3.3 Cooling water	7
1.4 Engine outline	8
1.5 Piping diagrams	10
1.6 Exhaust gas emission regulation	11
1.6.1 Engine identification	11
1.6.2 EPA exhaust gas emission standard	12
1.6.3 EPA guarantee conditions for emission standard	13
2. Inspection and adjustment	14
2.1 Periodic maintenance schedule	14
2.2 Periodic inspection and maintenance procedure	16
2.2.1 Check before starting	16
2.2.2 Inspection after initial 50 hours or one month operation	20
2.2.3 Inspection every 50 hours or monthly	22
2.2.4 Inspection on initial 250 hours or one year.....	27
2.2.5 Inspection every 250 hours or one year	33
2.2.6 Inspection every year	39
2.2.7 Inspection every 500 hours or two years.....	41
2.2.8 Inspection 2,000 hours or every two years.....	42
2.2.9 Inspection every 1,000 hours or four years	43
2.2.10 Inspection every 2000 hours or eight years	45
2.3 Adjusting the no-load minimum speed	49
2.4 Thermostat inspection	50
2.5 Test running	51
2.5.1 Preliminary precautions.....	51
2.5.2 Test running procedure	51
2.5.3 Check points and precautions during running	52
2.6 Long storage	53

3. Troubleshooting	54
3.1 Preparation before troubleshooting	54
3.2 Quick reference chart for troubleshooting	55
3.3 Trouble code	64
4. Disassembly and reassembly	65
4.1 Disassembly and reassembly precautions	65
4.2 Disassembly and reassembly tools	66
4.2.1 General hand tools	66
4.2.2 Special hand tools	68
4.2.3 Measuring instruments	71
4.2.4 Other material	75
4.3 Disassembly and reassembly	77
4.3.1 Disassembly	77
4.3.2 Reassembly	83
5. Inspection and servicing of basic engine parts	103
5.1 Cylinder block	103
5.1.1 Inspection of parts	103
5.1.2 Cleaning of oil holes	103
5.1.3 Color check procedure	104
5.1.4 Replacement of plugs	105
5.1.5 Cylinder bore measurement	106
5.2 Cylinder head	107
5.2.1 Inspecting the cylinder head	108
5.2.2 Valve seat correction procedure	109
5.2.3 Intake/exhaust valves, valve guides	111
5.2.4 Valve springs	114
5.2.5 Nozzle sleeve	116
5.2.6 Assembling the cylinder head	117
5.2.7 Measuring top clearance	118
5.2.8 Intake and exhaust rocker arms	119
5.2.9 Adjustment of valve clearance	120
5.3 Piston and piston pins	121
5.3.1 Piston	121
5.3.2 Piston pin	123
5.3.3 Piston rings	124

5.4 Connecting rod	127
5.4.1 Inspecting the connection rod	127
5.4.2 Crank pin metal	129
5.4.3 Piston pin bushing	131
5.4.4 Assembling piston and connecting rod.....	132
5.5 Crankshaft and main bearing	133
5.5.1 Crankshaft	133
5.5.2 Main bearing.....	135
5.6 Camshaft and Tappets	136
5.6.1 Camshaft	136
5.6.2 Tappets	138
5.7 Timing gear	140
5.7.1 Inspecting the gears	140
5.7.2 Gear timing marks	141
5.8 Flywheel and housing	142
5.8.1 Specifications of flywheel	142
5.8.2 Ring gear	143
5.8.3 Position of top dead center.....	143
6. Fuel injection equipment	144
6.1 Fuel Injection pump/governor/timer	144
6.1.1 Fuel system diagram	144
6.1.2 Fuel injection pump specifications.....	145
6.1.3 Removing a fuel injection pump assy.....	146
6.1.4 Installing a fuel injection pump assy.....	149
6.1.5 Troubleshooting of fuel injection pump.....	157
6.2 Fuel Injection nozzle	159
6.2.1 Functioning of fuel injection nozzle	159
6.3 Fuel feed pump	161
6.3.1 Fuel feed pump specifications.....	162
6.3.2 Fuel feed pump disassembly.....	162
6.3.3 Fuel feed pump inspection	163
6.3.4 Fuel feed pump reassembly	163
6.3.5 Fuel feed pump adjustment	164
6.4 Fuel filter	166
6.4.1 Fuel filter specifications	166

6.4.2 Fuel filter inspection	167
7. Intake and exhaust system	168
7.1 Intake system	168
7.2 Exhaust system	168
7.2.1 Mixing elbow inspection	168
8. Lubrication system	169
8.1 Lubrication system	169
8.2 Lube oil pump	170
8.2.1 Lube oil pump construction	170
8.2.2 Specifications of lube oil pump	171
8.2.3 Lube oil pump disassembly and reassembly	172
8.2.4 Oil pressure control valve construction	174
8.3 Lube oil filter	175
8.3.1 Lube oil filter construction	175
8.3.2 Lube oil filter replacement	175
8.4 Lube oil cooler	176
8.4.1 Lube oil cooler construction	176
8.4.2 Inspecting the lube oil cooler	176
8.5 Rotary waste oil pump (Optional)	177
9. Cooling water system	178
9.1 Cooling water system	178
9.2 Seawater pump	179
9.2.1 Specifications of seawater pump	179
9.2.2 Seawater pump disassembly	180
9.2.3 Seawater pump Inspection	180
9.2.4 Seawater pump reassembly	181
9.3 Fresh water pump	182
9.3.1 Fresh water pump construction	182
9.3.2 Specifications of fresh water pump	183
9.3.3 Fresh water pump disassembly	183
9.3.4 Fresh water pump inspection	184
9.4 Heat exchanger	186
9.4.1 Heat exchanger construction	186
9.4.2 Specifications of heat exchanger	186

9.4.3 Disassembly and reassembly.....	186
9.4.4 Heat exchanger inspection.....	187
9.5 Pressure cap and coolant recovery tank	188
9.5.1 Pressure cap construction.....	188
9.5.2 Pressure cap pressure control	188
9.5.3 Pressure cap inspection	189
9.5.4 Function of the coolant recovery tank	189
9.5.5 Specifications of coolant recovery tank	189
9.5.6 Mounting the coolant recovery tank	190
9.5.7 Precautions on usage of the coolant recovery tank	190
9.6 Thermostat	191
9.6.1 Functioning of thermostat.....	191
9.6.2 Thermostat construction.....	191
9.6.3 Characteristics of thermostat.....	192
9.6.4 Thermostat inspection	192
9.6.5 Testing the thermostat.....	192
9.7 Seacock (Optional)	193
9.8 Bilge pump and bilge strainer (Optional)	194
9.8.1 Introduction.....	194
9.8.2 Description	195
9.8.3 Cautions	196
9.8.4 Assembly procedure.....	198
9.8.5 Cautions for Assembling	200
9.8.6 Troubleshooting.....	202
10. Turbocharger	203
10.1 Construction and function	204
10.1.1 Outline	204
10.2 Standards for maintenance and check	206
10.2.1 Standards for maintenance and check	206
10.2.2 Tightening torque	207
10.3 Periodical checking procedure	208
10.3.1 Periodical checking interval.....	208
10.3.2 Checking procedure	208
10.4 Disassembly procedure	210
10.4.1 Preparations for disassembly	210

10.4.2 Check before disassembly	212
10.4.3 Disassembly	213
10.5 Cleaning and checking procedure	215
10.5.1 Cleaning	215
10.5.2 Checking procedure	217
10.6 Reassembling procedure	220
10.6.1 Preparations for reassembly	220
10.6.2 Reassembling procedure	220
10.7 Handling after reassembly	223
10.7.1 Precautions for mounting the turbocharger to the engine	223
10.8 Troubleshooting	224
10.8.1 Exhaust gas is dense	224
10.8.2 Whitish exhaust gas	224
10.8.3 Too early oil shortage	225
10.8.4 Output drop	225
10.8.5 Poor follow-up of supercharger	225
10.8.6 Unusual sound or vibration.....	225
11. Reduction and reversing gear	226
12. Remote control	227
12.1 Electronic control system (ECS)	227
12.1.1 Digital display	228
12.1.2 Rocker switch panel	230
12.1.3 Control head (Shift & Throttle).....	231
13. Electrical system	232
13.1 Electrical system	232
13.1.1 Wiring diagram	232
13.2 Battery	233
13.2.1 Construction	233
13.2.2 Battery capacity and battery cables	234
13.2.3 Inspection	235
13.2.4 Charging	237
13.2.5 Battery storage precautions	238
13.3 Starting Motor	239
13.3.1 Specifications	239

13.3.2 Characteristics.....	239
13.3.3 Structure.....	240
13.3.4 Wiring diameter of a starting motor	242
13.4 Alternator standard, 12V/80A	243
13.4.1 Specifications	243
13.4.2 Structure.....	244
13.4.3 Wiring diagram	245
13.4.4 Standard output characteristics.....	246
13.4.5 Inspection	247
13.5 Warning devices	248
13.5.1 Sensor installation position.....	248
13.5.2 Lube oil pressure sensor and boost sensor	250
13.5.3 Temperature sensor for water, lube oil and fuel.....	251
14. Service standards	252
14.1 Engine tuning	252
14.2 Engine body	253
14.2.1 Cylinder head	253
14.2.2 Camshaft and gear train.....	254
14.2.3 Cylinder block.....	255
15. Tightening torque for bolts and nuts	258
15.1 Main bolt and nut	258
15.2 Standard bolts and nuts (without lube oil)	259