YAMAHA



F50A
FT50B
FT50C

SERVICE MANUAL

290408

62Y-28197-3A-11

NOTICE

This manual has been prepared by Yamaha primarily for use by Yamaha dealers and their trained mechanics when performing maintenance procedures and repairs to Yamaha equipment. It has been written to suit the needs of persons who have a basic understanding of the mechanical and electrical concepts and procedures inherent in the work, for without such knowledge attempted repairs or service to the equipment could render it unsafe or unfit for use.

Because Yamaha has a policy of continuously improving its products, models may differ in detail from the descriptions and illustrations given in this publication. Use only the latest edition of this manual. Authorized Yamaha dealers are notified periodically of modifications and significant changes in specifications and procedures, and these are incorporated in successive editions of this manual.

Important information

Particularly important information is distinguished in this manual by the following notations:

⚠ The Safety Alert Symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!

⚠ WARNING

Failure to follow WARNING instructions could result in severe injury or death to the machine operator, a bystander, or a person inspecting or repairing the outboard motor.

CAUTION:

A CAUTION indicates special precautions that must be taken to avoid damage to the outboard motor.

NOTE:

A NOTE provides key information to make procedures easier or clearer.

F50A, FT50B, FT50C
SERVICE MANUAL
©2000 by Yamaha Motor Co., Ltd.
1st Edition, November 2000
All rights reserved.
Any reprinting or unauthorized use without the written permission of Yamaha Motor Co., Ltd. is expressly prohibited.
Printed in the Netherlands

Contents

General information	GEN INFO	1
Specifications	SPEC	2
Periodic checks and adjustments	CHK ADJ	3
Fuel system	FUEL	4
Power unit	POWR	5
Lower unit	LOWR	6
Bracket unit	BRKT	7
Electrical systems	ELEC	8
Index		

General information

How to use this manual **1-1**
Manual format 1-1
Symbols 1-2

Safety while working **1-3**
Fire prevention 1-3
Ventilation 1-3
Self-protection 1-3
Parts, lubricants, and sealants 1-3
Good working practices 1-4
Disassembly and assembly 1-4

Identification **1-5**
Applicable models 1-5
Serial number 1-5

Features and benefits **1-6**
Newly designed four carburetors 1-6
CDI unit with microcomputer 1-7
Lower unit 1-8

Technical tips **1-10**
Carburetor 1-10
Acceleration pump 1-15
Ignition system 1-17
Ignition timing control 1-19
Power trim and tilt 1-22

Propeller selection **1-32**
Propeller size 1-32
Selection 1-32

Predelivery checks **1-33**
Checking the fuel system 1-33
Checking the gear oil 1-33
Checking the engine oil 1-33
Checking the battery 1-33
Checking the outboard motor mounting position 1-34
Checking the remote control cables 1-34
Checking the steering wheel/tiller handle 1-34
Checking the gearshift and throttle operation 1-34
Checking the tilt system 1-35
Checking the engine start switch and
engine stop switch/engine shut-off switch 1-35
Checking the pilot water outlet 1-35
Test run 1-35
Break-in 1-36
After test run 1-36


62Y3A11

How to use this manual

Manual format

The format of this manual has been designed to make service procedures clear and easy to understand. Use the information below as a guide for effective and quality service.

① Parts are shown and detailed in an exploded diagram and are listed in the components list.
② Tightening torque specifications are provided in the components list at the beginning of each section and after a numbered step with tightening instructions.
③ Symbols are used to indicate important aspects of a procedure, such as the grade of lubricant and lubrication point.
④ The components list consist of parts and part quantities, as well as bolt and screw dimensions.
⑤ Service points regarding removal, checking, and installation are shown in individual illustrations to explain the relevant procedure.
⑥ This service manual has two types of special service tools. Use part numbers that start with “J-”, “YB-”, “YM-”, “YS-”, “YU-”, “YW-”, or “YX-” for USA and Canada. Use parts numbers that start with “90890-” for all other countries.

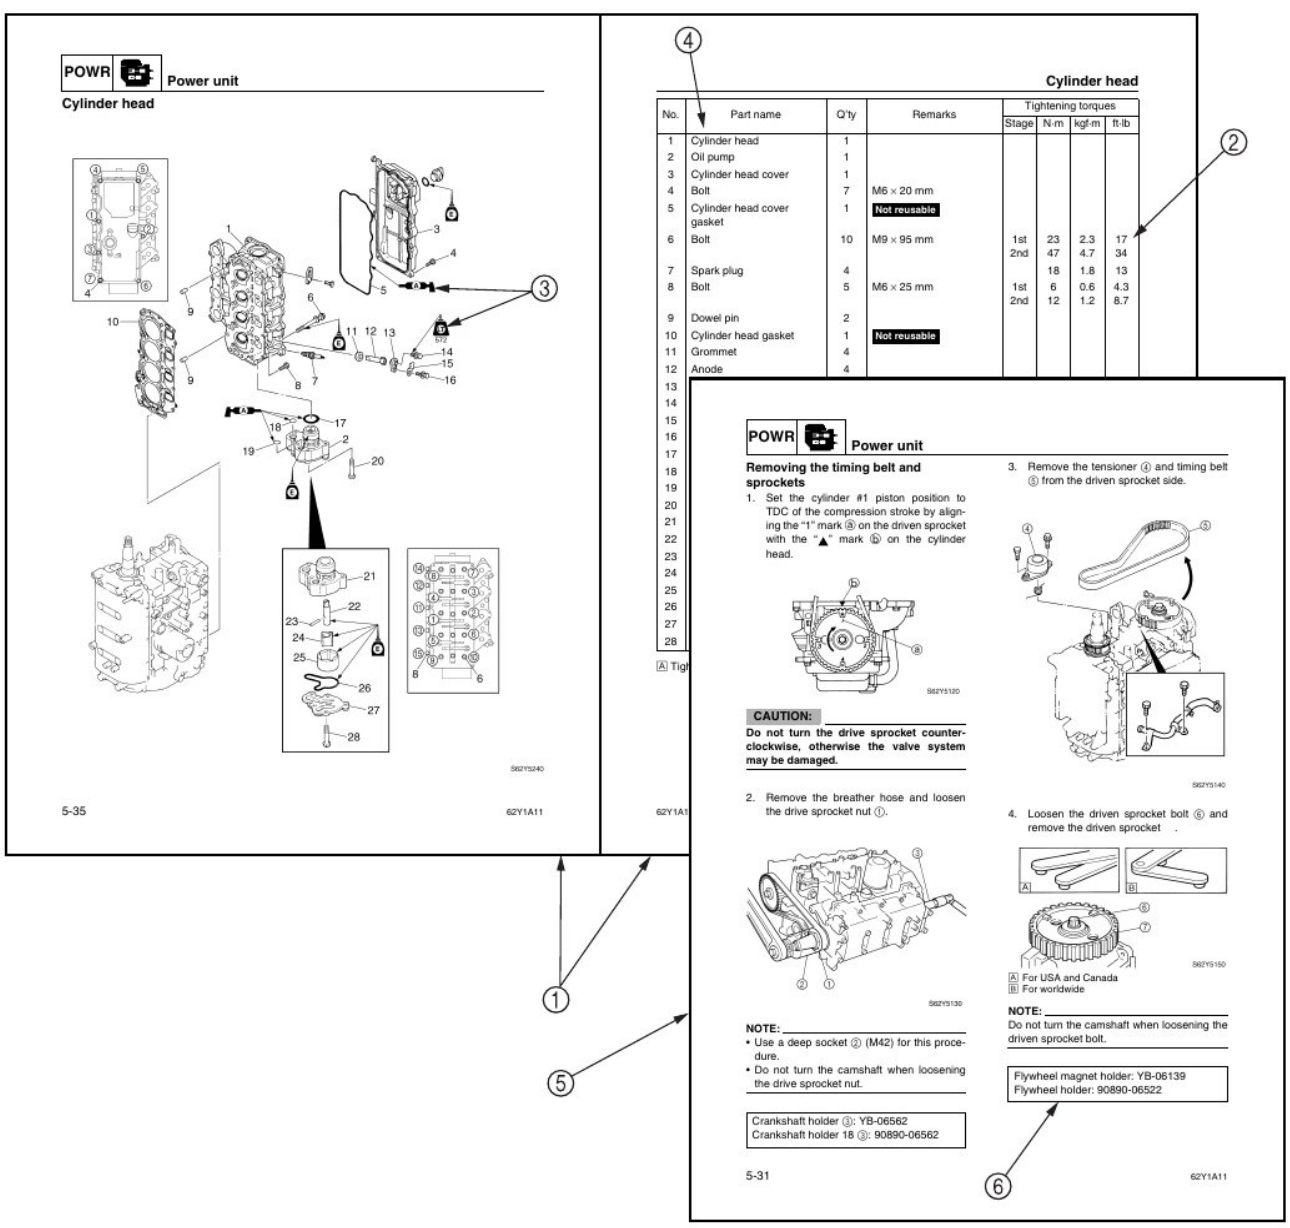

APERÇU — Engine Manual — fichier complet disponible après achat
6/10

Symbols

The symbols below are designed to indicate the content of a chapter.


General information



Power unit



Specifications



Lower unit



Periodic checks and adjustments




Bracket unit




Fuel system



Electrical systems




Symbols ① to ⑤ in an exploded diagram indicate the grade of lubricant and the lubrication point.

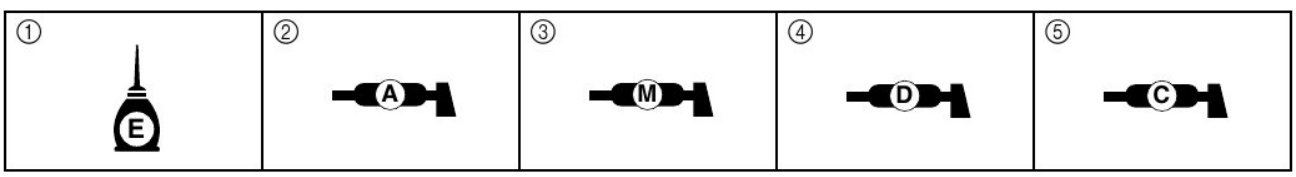

① Apply Yamaha 4-stroke motor oil
② Apply water resistant grease (Yamaha grease A, Yamaha marine grease)
③ Apply molybdenum disulfide grease
④ Apply anti-corrosion grease (Yamaha grease D)
⑤ Apply low temperature resistant grease (Yamaha grease C)

Symbols ⑥ to ⑪ in an exploded diagram indicate the type of sealant or locking agent and the application point.

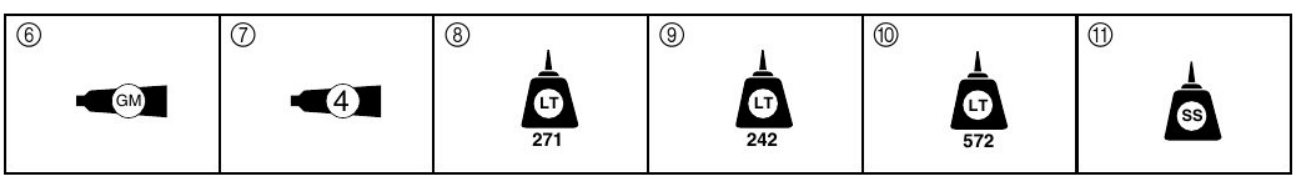

⑥ Apply Gasket Maker®
⑦ Apply Yamabond No. 4
⑧ Apply LOCTITE® No. 271 (Red LOCTITE)
⑨ Apply LOCTITE® No. 242 (Blue LOCTITE)
⑩ Apply LOCTITE® No. 572
⑪ Apply silicon sealant


APERÇU — Engine Manual — fichier complet disponible après achat 7/10

Safety while working

To prevent an accident or injury and to ensure quality service, follow the safety procedures provided below.


Fire prevention

Gasoline is highly flammable.
Keep gasoline and all flammable products away from heat, sparks, and open flames.

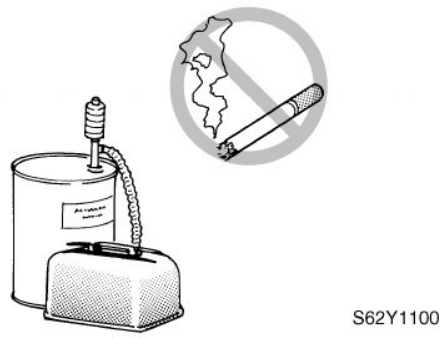
S62Y1100


Ventilation

Gasoline vapor and exhaust gas are heavier than air and extremely poisonous. If inhaled in large quantities they may cause loss of consciousness and death within a short time. When test running an engine indoors (e.g., in a water tank) be sure to do so where adequate ventilation can be maintained.

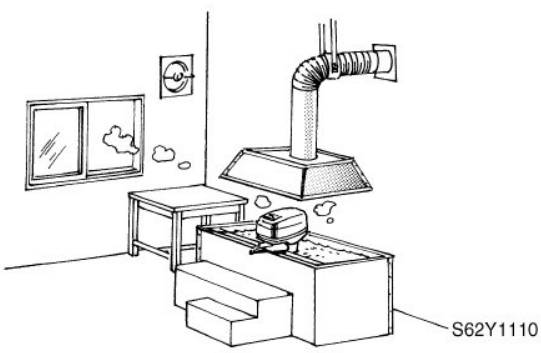
S62Y1110


Self-protection

Protect your eyes by wearing safety glasses or safety goggles during all operations involving drilling and grinding, or when using an air compressor.
Protect your hands and feet by wearing protective gloves and safety shoes when necessary.

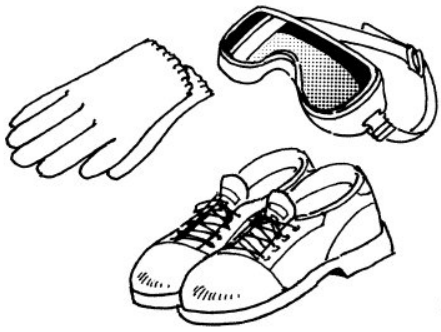
S62Y1120

Parts, lubricants, and sealants

Use only genuine Yamaha parts, lubricants, and sealants or those recommended by Yamaha, when servicing or repairing the outboard motor.

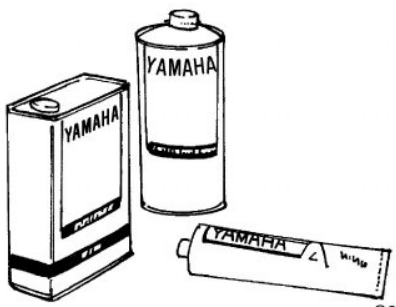

S62Y1130

Under normal conditions, the lubricants mentioned in this manual should not harm or be hazardous to your skin. However, you should follow these precautions to minimize any risk when working with lubricants.

1. Maintain good standards of personal and industrial hygiene.
2. Change and wash clothing as soon as possible if soiled with lubricants.
3. Avoid contact with skin. Do not, for example, place a soiled rag in your pocket.
4. Wash hands and any other part of the body thoroughly with soap and hot water after contact with a lubricant or lubricant soiled clothing has been made.
5. To protect your skin, apply a protective cream to your hands before working on the outboard motor.


APERÇU — Engine Manual — fichier complet disponible après achat 8/10

6. Keep a supply of clean, lint-free cloths for wiping up spills, etc.

Good working practices

Special tools

Use the recommended special tools to protect parts from damage. Use the right tool in the right manner—do not improvise.

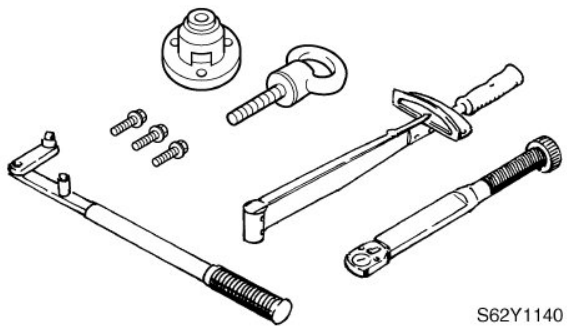

S62Y1140

Tightening torques

Follow the tightening torque specifications provided throughout the manual. When tightening nuts, bolts, and screws, tighten the large sizes first, and tighten fasteners starting in the center and moving outward.

Non-reusable parts

Always use new gaskets, seals, O-rings, cotter pins, circlips, etc., when installing or assembling parts.




S62Y1150

Disassembly and assembly

1. Use compressed air to remove dust and dirt during disassembly.

2. Apply engine oil to the contact surfaces of moving parts before assembly.

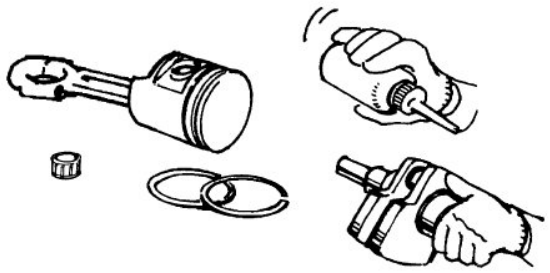

S62Y1160

3. Install bearings with a manufacture identification mark in the direction indicated in the installation procedure. In addition, be sure to lubricate the bearings liberally.

4. Apply a thin coat of water-resistant grease to the lip and out periphery of an oil seal before installation.

5. Check that moving parts operate normally after assembly.

APERÇU — Engine Manual — fichier complet disponible après achat

Identification

Applicable models


This manual covers the following models.

Applicable models	
USA, Canada	Worldwide
—	F50AEHD
F50TH	F50AEHT
—	F50AED
F50TR	F50AET
T50TR	FT50BET
—	FT50CEHD
—	FT50CED
—	FT50CET


Model name	Approved model code	Starting serial No.
USA, Canada		
F50TH	62Y	L: 451812–
F50TR		L: 421732–
T50TR	64J	L: 406850–
Worldwide		
F50AEHD	62Y	L: 350505–
F50AEHT		L: 451812–
		X: 750469–
F50AED		L: 301090–
F50AET		L: 421626–
		X: 700700–
FT50BET	64J	L: 406850–
FT50CEHD		L: 650101–
FT50CED		L: 550101–
FT50CET		L: 450101–

Serial number

The outboard motor serial number is stamped on a label attached to the port clamp bracket.

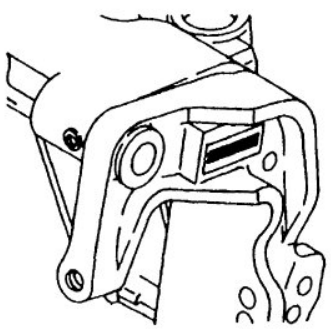

S62Y1180

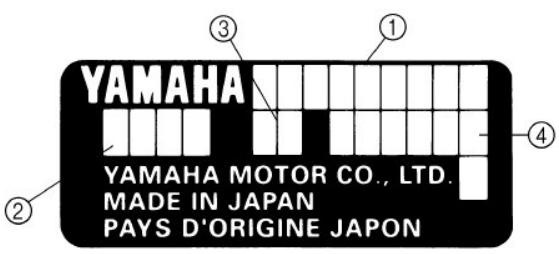

S62Y1190

① Model name
② Approved model code
③ Transom height
④ Serial number

APERÇU — Engine Manual — fichier complet disponible après achat 10/10